



FRONT OF PAGE 2

FRONT OF PAGE 1

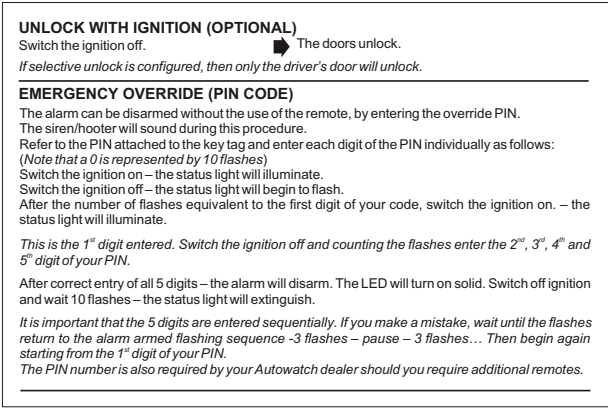

FRONT OF PAGE 3

<p style="text-align: center;">INTRODUCTION</p> <p><i>Congratulations. Your vehicle is protected by an Autowatch vehicle security system designed to give years of trouble free operation, made with only the highest quality components and using state of the art technology you can be assured that your vehicle has the best electronic protection available.</i></p> <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <p>ARM</p> <p>DISARM</p> </div>  </div> <hr/> <p>ARMING OF THE ALARM</p> <p>Press the Arm button momentarily. ➡ 1 arming tone and park lights flash once. The status light flashes armed sequence. 3 flashes – pause – 3 flashes...</p> <p><i>A "door open" warning tone can be programmed by your Autowatch dealer.</i></p> <hr/> <p>DISARMING OF THE ALARM</p> <p>Press the Disarm button momentarily. ➡ 2 disarming tones and the park lights flash twice. The status light extinguishes.</p> <p><i>The "on" and "off" tones may be de-selected by your Autowatch dealer.</i></p> <hr/> <p>ANTI HIJACK IMMOBILISER (OPTIONAL)</p> <p>Press the hidden cancel button after switching the ignition on, or opening the hijack door/s. ➡ The status light illuminates for 1 second to indicate that hijack has been cancelled.</p> <p><i>Failure to do so will result in warning tones, slowing down of the vehicle followed by immobilization and siren/hooter at full volume with park lights flashing, press the cancel button at any stage to exit.</i></p>	<p>HIJACK SERVICE MODE</p> <p><i>(Use this feature to avoid revealing the location of the cancel button)</i></p> <p>With the alarm disarmed, press and hold the hijack cancel button. While depressed, press the arm or disarm button on the remote. ➡ 2 tones will be heard indicating the hijack feature is disabled.</p> <p>To re-select hijack, repeat the above procedure. ➡ 1 tone will be heard indicating the hijack feature is enabled.</p> <hr/> <p>EARLY WARNING DETECTION (OPTIONAL)</p> <p>If the vehicle is bumped. ➡ The siren/hooter will sound momentarily and the park lights will flash.</p> <hr/> <p>EARLY WARNING ISOLATION</p> <p>Press the Arm button a second time within one second after turning the alarm on. ➡ A tone is heard indicating the feature is deselected for this arm cycle.</p> <hr/> <p>INTRUSION DETECTION</p> <p>The Alarm will detect a significant impact to the vehicle, the ignition being switched on and doors, bonnet or trunk opening. ➡ The siren/hooter will sound and the hazards flash for 30 seconds, unless the remote is pressed.</p> <p><i>Each zone will trigger the alarm a maximum of 3 times per "on" cycle.</i></p>
---	---

Inside Pages 1

Inside Pages 2

<p>IMPACT SENSOR ISOLATION</p> <p>Press the Arm button a third time within 1 second after isolating early warning.. ➡ A tone is heard indicating the feature is deselected for this arm cycle.</p> <hr/> <p>REMOTE PANIC</p> <p>Press and hold the Arm or Disarm button on the remote for 3 seconds. ➡ The siren/hooter will sound and the hazards flash, unless the remote is pressed.</p> <hr/> <p>CENTRAL LOCKING (OPTIONAL)</p> <p>Turn the alarm on. ➡ The doors will lock.</p> <p>Turn the alarm off. ➡ The doors will unlock.</p> <p>With the ignition on, press the remote. ➡ The doors will lock/unlock.</p> <hr/> <p>SELECTIVE UNLOCKING (OPTIONAL)</p> <p>Turn the alarm off. ➡ The driver's door will unlock.</p> <p>Press the Disarm button again. ➡ The passenger doors will unlock.</p> <hr/> <p>LOCK WITH IGNITION (OPTIONAL)</p> <p>Switch the ignition on with doors closed. ➡ The doors will lock.</p>	
--	--

Inside Pages 3